



FF-FC800 Fiber Cleaver Manual

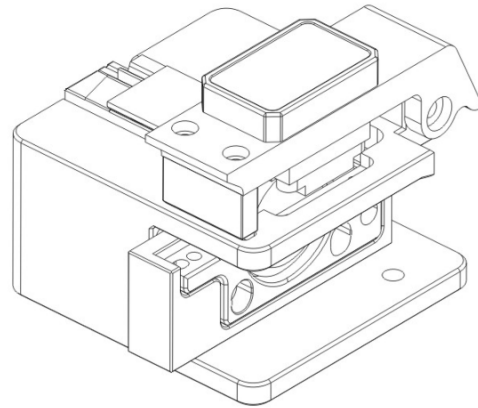


Notice:

- ✧ Read this manual before use.
- ✧ Don't wet cleaver.
- ✧ Don't place cleaver in a wet or dusty condition.
- ✧ Don't strike it.
- ✧ Preserve it under normal temperature.
- ✧ Reserve enough bare fiber for different requirement.
- ✧ Periodically Clean V-groove and fixing plate by alcohol(don't use acetone or other corrosive solvent).

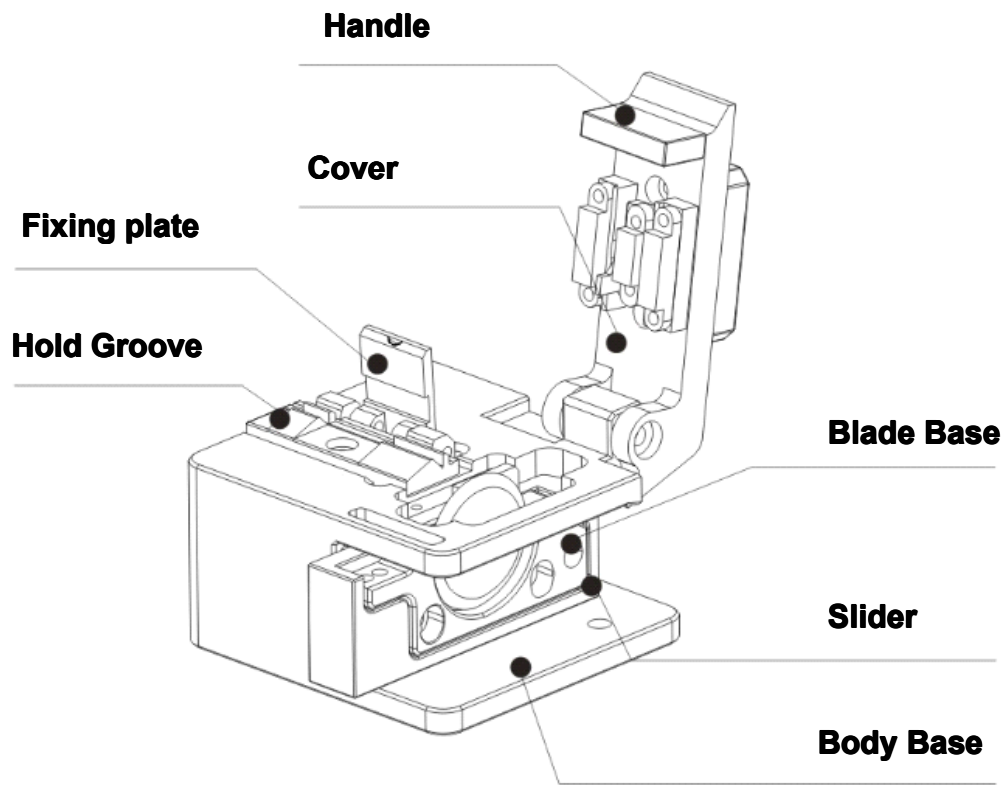


Operation:

Procedure 1:

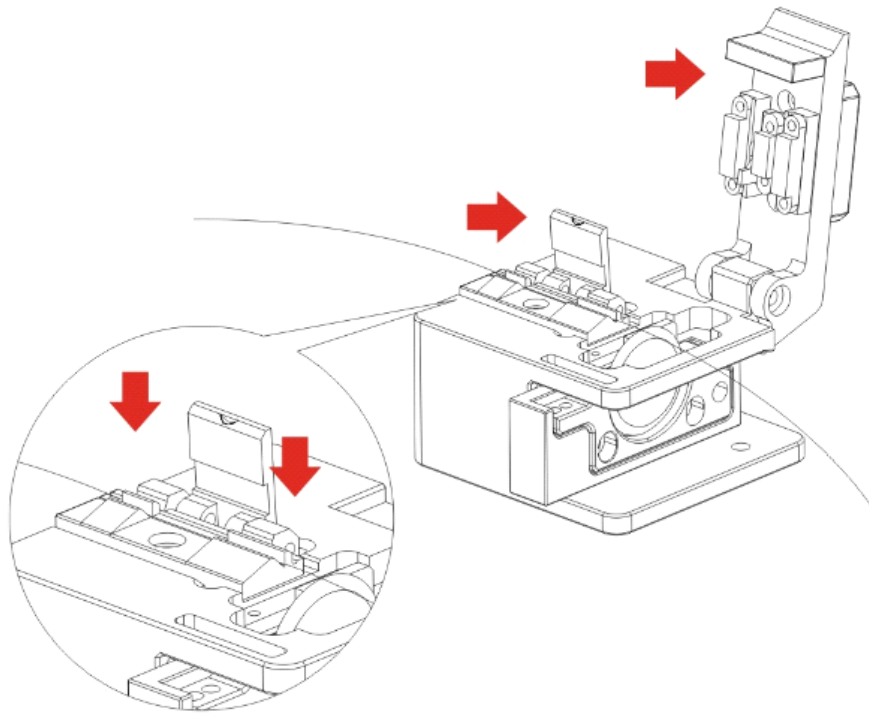


Open cover and fixing plate, place one piece of fiber (which was stripped coating and cleaned) on the V-groove.

Procedure 2

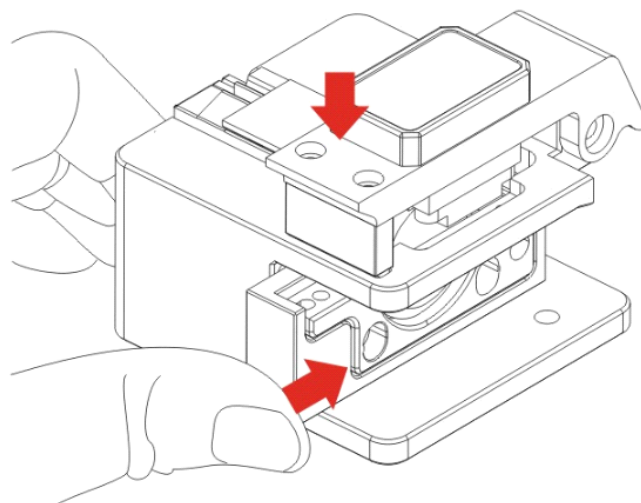


Close fixing plate and cover, push slider to the end.

Procedure 3

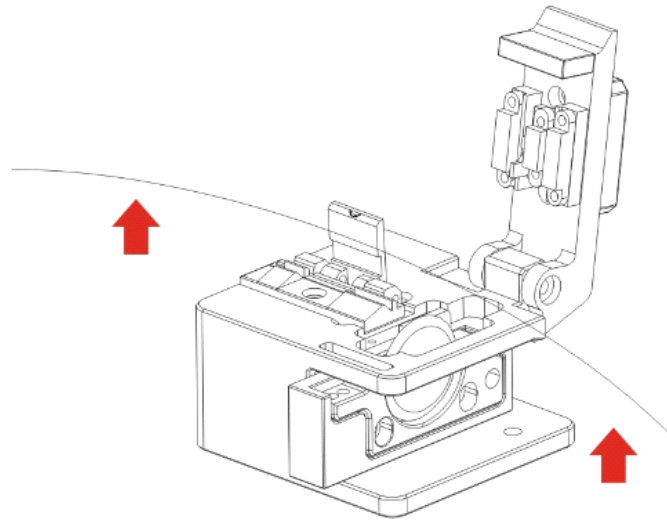

Open fixing plate and cover, take fiber out, don't touch the terminal of fiber,so as not to damage the fiber.please clean the rubbish or dirt on blade in time, so as not to damage the blade.

Cleaning of the cleaver

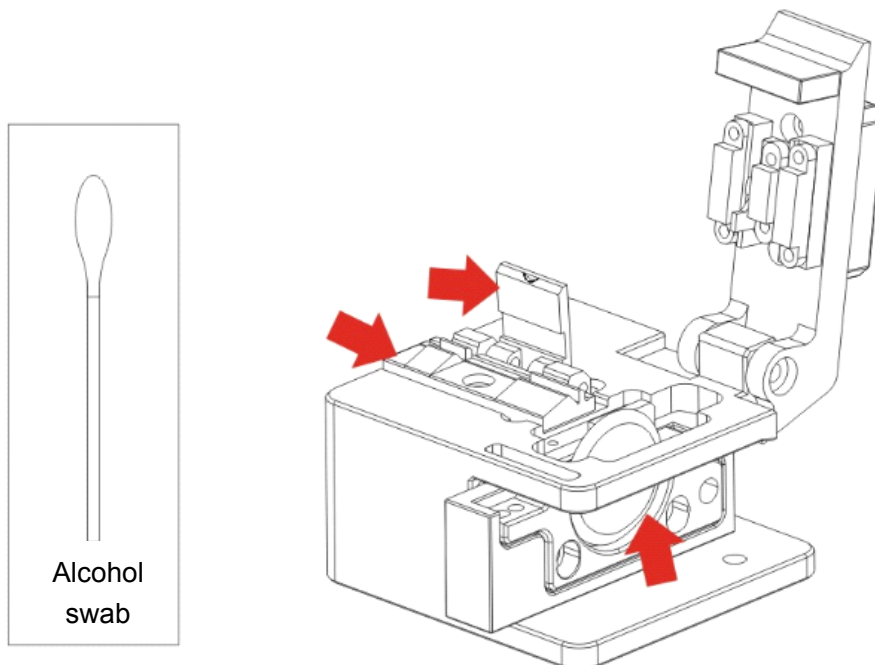


After one period time of use please clean groove,fixing plate and blade edge by alcohol(don't use acetone or other corrosive solvent).

Blade Adjustment

If blade can't cut fiber normally, it means you should change the cutting position of blade.

1-12 cutting point

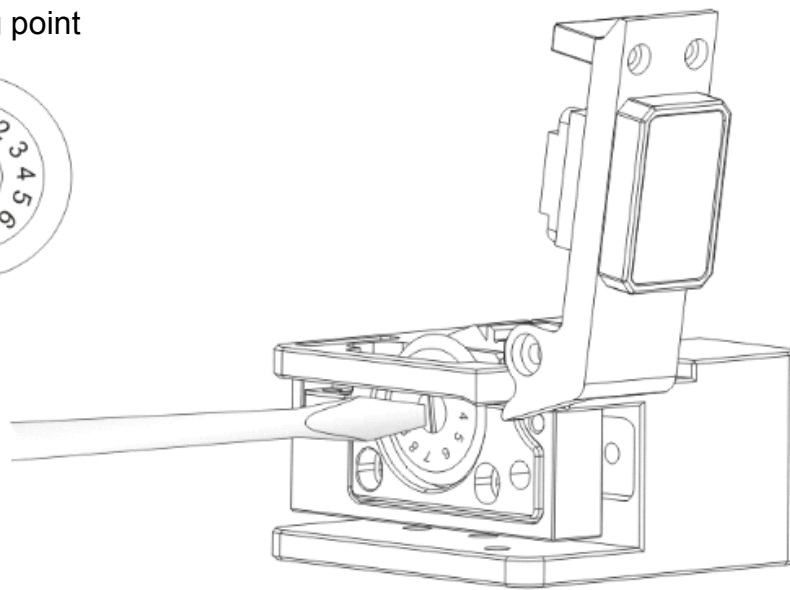


Use screw drive anticlockwise drive the screw , anticlockwise rotate the blade to next cutting point, then tighten the screw .

Blade Replacement

After use of all the cutting point, it's necessary to replace the blade.


Procedure 1

Take out the screw which used to adjust the height of blade

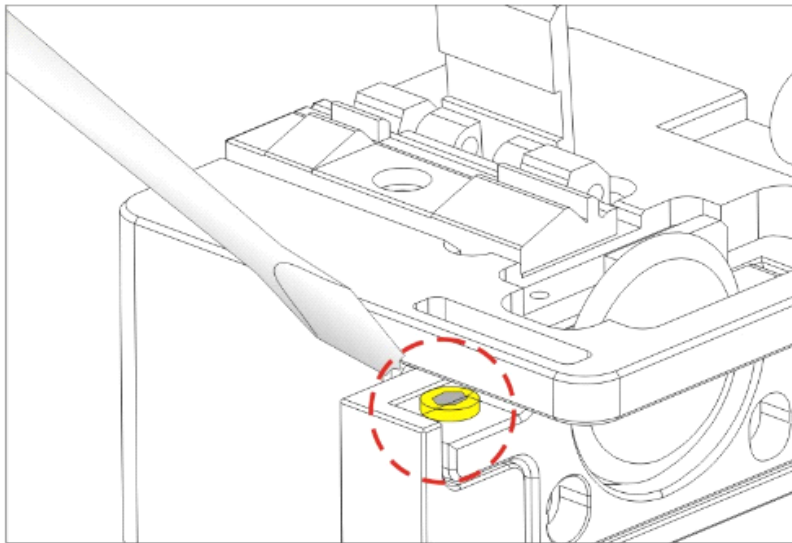

Procedure 2

Take out the blade base fixing screw.

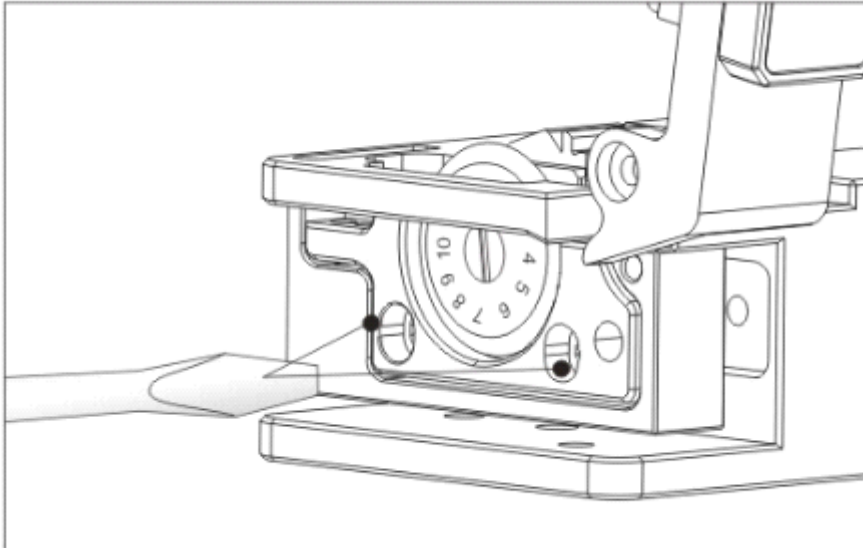

Procedure 3

Take out blade base carefully, anticlockwise rotate blade fixing screw and replace a new blade, set the number "1" to the top of the blade, then tighten blade fixing screw.



#1 cutting point is at the top of the blade

Procedure 4


Fix blade base on the slider, tighten the screw.

Procedure 5

Adjust the blade base.

Detail :

Place one prepared fiber on the V-groove, close fixing plate, fiber should be in a horizontal position.

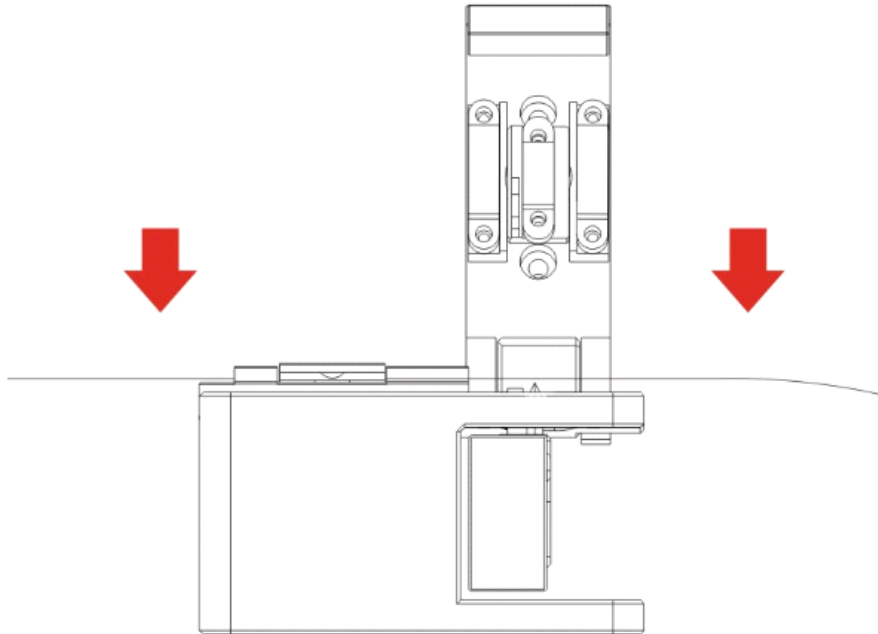

Fine tune the screws on the blade base and lift the top of blade base to the fiber.

